

Assembly Instructions

Magnetic holder / magnetic installation for smoke detectors




Step 1 Installation of the ceiling element

- Mark the **installation location** of the smoke detector on the ceiling as described in the instructions for your smoke detector.

- Remember that the adhesive has been designed for a **permanent bond**.
- Since it also offers excellent immediate adhesion, the **ceiling element** is immediately firm after being pressed on and cannot be removed again. Make sure that the **ceiling** of the intended location is sufficiently **firm, dry, and free of grease and dust**. If necessary, clean them with methylated spirit or window cleaner. All-purpose or bathroom cleaners containing soap are not suitable.

- Take the **ceiling element** out of this cover, pull off the **protective film** and stick the **metal plate** to the intended place on the ceiling.

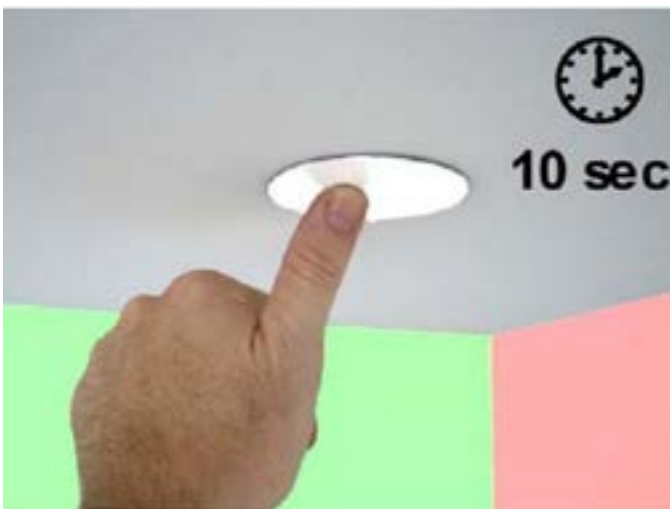

Step 2 Assembly of the base element

- If you have not yet installed the battery, insert the **battery** according to the instructions and test the smoke detector.
- Take the **magnetic base element** out of the cover, pull off **the protective film** and stick it on the **mounting base** of the smoke detector. Press it down firmly for at least 10 seconds.



Step 3 Assembly of the smoke detector

- Check again that the **mounting base** with the **magnetic plate** attached is connected to the smoke detector as firmly as described in the instructions for your smoke detector.
- Place the **smoke detector** on the ceiling element. **Done!**

